

Bh214br0. txt

DEPARTMENT OF TRANSPORTATION  
FEDERAL AVIATION ADMINISTRATION  
WASHINGTON, D. C.

Revision: ORIGINAL  
Date: 03/01/95

MASTER MINIMUM EQUIPMENT LIST

BH-214B

Federal Aviation Administration  
Fort Worth, TX 76193-0270

Telephone: (817) 222-5270  
FAX: (817) 222-5285

FEDERAL AVIATION ADMINISTRATION  
MASTER MINIMUM EQUIPMENT LIST  
BH-214B

Page: I  
Revision: ORIGINAL  
Date: 03/01/95

SYSTEM NO.	SYSTEM	PAGE
--	Table of Contents	I
--	Log of Revisions	II
--	Control Page	III
--	Definitions	IV, V, VI, VII
--	Definitions	VIII, IX, X, XI
--	Preamble	XII, XIII
--	Guidelines for (O) & (M) Procedures	XIV
21	Air Conditioning	21-1
22	Auto Flight	22-1
23	Communications	23-1
24	Electrical Power	24-1
25	Equipment/Furnishings	25-1
26	Fire Protection	26-1
27	Flight Controls	27-1
30	Ice and Rain Protection	30-1
31	Indicating/Recording Systems	31-1
33	Lights	33-1, 2
34	Navigation	34-1
35	Oxygen	35-1
52	Doors	52-1
65	Rotors	65-1
77	Engine Indicating	77-1

FEDERAL AVIATION ADMINISTRATION

Page: II

MASTER MINIMUM EQUIPMENT LIST


Revision: ORIGINAL

Date: 03/01/95

BH-214B

Log of Revisions

REV. NO.	DATE	PAGE NUMBERS	INITIALS

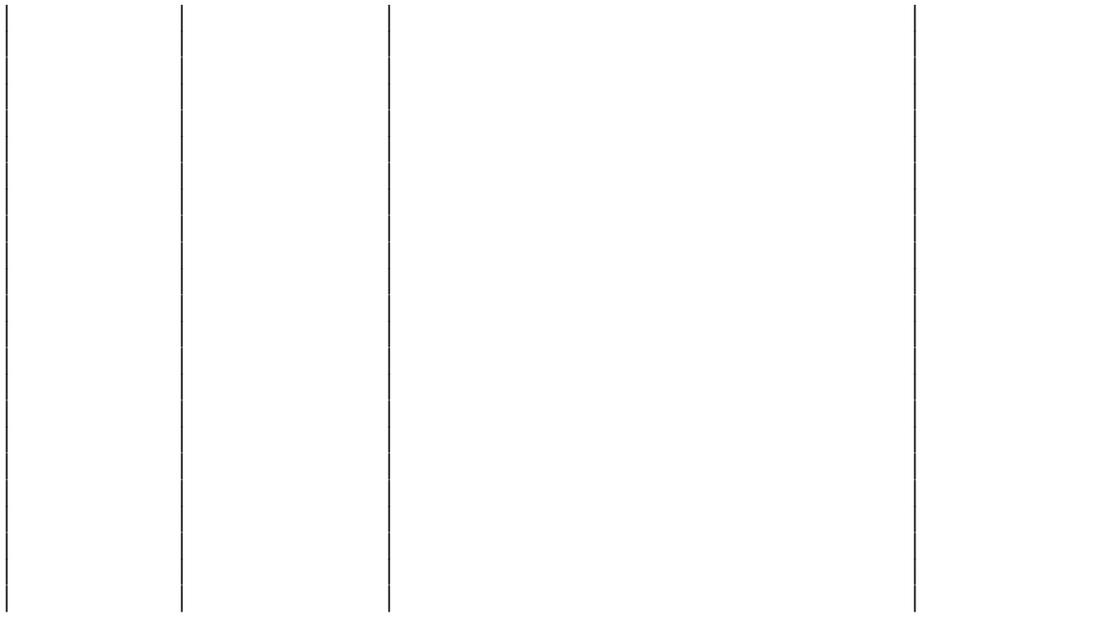

FEDERAL AVIATION ADMINISTRATION

Page: III

MASTER MINIMUM EQUIPMENT LIST

Revision: ORIGINAL

Date: 03/01/95

BH-214B

Control Page

SYSTEM	PAGE	REV NO.	CURRENT DATE
Cover Page	-	ORIGINAL	03/01/95
Table of Contents	I	ORIGINAL	03/01/95
Log of Revisions	II	ORIGINAL	03/01/95
Control Page	III	ORIGINAL	03/01/95
Definitions	IV	6	01/31/95
	V	6	01/31/95
	VI	6	01/31/95
	VII	6	01/31/95
	VIII	6	01/31/95
	IX	6	01/31/95
	X	6	01/31/95
	XI	6	01/31/95
Preamble	XII	2	06/14/89
	XIII	2	06/14/89
Guidelines for (O) & (M) Procedures	XIV	ORIGINAL	03/01/95
21	21-1	ORIGINAL	03/01/95
22	22-1	ORIGINAL	03/01/95
23	23-1	ORIGINAL	03/01/95
24	24-1	ORIGINAL	03/01/95
25	25-1	ORIGINAL	03/01/95
26	26-1	ORIGINAL	03/01/95
27	27-1	ORIGINAL	03/01/95

Bh214br0. txt

30	30-1	ORIGI NAL	03/01/95
31	31-1	ORIGI NAL	03/01/95
33	33-1	ORIGI NAL	03/01/95
	33-2	ORIGI NAL	03/01/95
34	34-1	ORIGI NAL	03/01/95
35	35-1	ORIGI NAL	03/01/95
52	52-1	ORIGI NAL	03/01/95
65	65-1	ORIGI NAL	03/01/95
77	77-1	ORIGI NAL	03/01/95

FEDERAL AVIATI ON ADMI NI STRATI ON

Page: IV

MASTER MI NI MUM EQUI PMENT LI ST

Revi si on: 6

Date: 01/31/95

BH-214B

### Defi ni ti ons

#### 1. System Defi ni ti ons.

System numbers are based on the Air Transport Association (ATA) Specification Number 100 and items are numbered sequentially.

- a. "Item" (Column 1) means the equipment, system, component, or function listed in the "Item" column.
- b. "Number Installed" (Column 2) is the number (quantity) of items normally installed in the aircraft. This number represents the aircraft configuration considered in developing this MMEL. Should the number be a variable (e.g., passenger cabin items) a number is not required.
- c. "Number Required for Dispatch" (Column 3) is the minimum number (quantity) of items required for operation provided the conditions specified in Column 4 are met.

NOTE: Where the MMEL shows a variable number required for dispatch, the MEL must reflect the actual number required for dispatch or an alternate means of configuration control approved by the Administrator.

- d. "Remarks or Exceptions" (Column 4) in this column includes a statement either prohibiting or permitting operation with a specific number of items inoperative, provisos (conditions and limitations) for such operation, and appropriate notes.
- e. A vertical bar (change bar) in the margin indicates a change, addition or deletion in the adjacent text for the current revision of that page only. The change bar is dropped at the next revision of that page.

2. "Airplane/Rotorcraft Flight Manual" (AFM/RFM) is the document required for type certification and approved by the responsible

FAA Aircraft Certification Office. The FAA approved AFM/RFM for the specific aircraft is listed on the applicable Type

FEDERAL AVIATION ADMINISTRATION

Page: V

MASTER MINIMUM EQUIPMENT LIST

Revision: 6

Date: 01/31/95

BH-214B

Definitions

Certificate Data Sheet.

3. "As required by FAR" means that the listed item is subject to certain provisions (restrictive or permissive) expressed in the Federal Aviation Regulations operating rules. The number of items required by the FAR must be operative. When the listed item is not required by FAR it may be inoperative for time specified by repair category.

4. Each inoperative item must be placarded to inform and remind the crewmembers and maintenance personnel of the equipment condition.

NOTE: To the extent practical, placards should be located adjacent to the control or indicator for the item affected; however, unless otherwise specified, placard wording and location will be determined by the operator.

5. "-" symbol in Column 2 and/or Column 3 indicates a variable number (quantity) of the item installed.

6. "Deleted" in the remarks column after a sequence item indicates that the item was previously listed but is now required to be operative if installed in the aircraft.

7. "ER" refers to extended range operations of a two-engine airplane which has a type design approval for ER operations and complies with the provisions of Advisory Circular 120-42A.

8. "Federal Aviation Regulations" (FAR) means the applicable portions of the Federal Aviation Act and Federal Aviation Regulations.

9. "Flight Day" means a 24 hour period (from midnight to midnight) either Universal Coordinated Time (UCT) or local time, as established by the operator, during which at least one flight is initiated for the affected aircraft.

10. "Icing Conditions" means an atmospheric environment that may cause ice to form on the aircraft or in the engine(s).

11. Alphabetical symbol in Column 4 indicates a proviso (condition or limitation) that must be complied with for

BH-214B

Defi ni ti ons

operation with the listed item inoperative.

12. "Inoperative" means a system and/or component malfunction to the extent that it does not accomplish its intended purpose and/or is not consistently functioning normally within its approved operating limit(s) or tolerance(s).

13. "Notes:" in Column 4 provides additional information for crewmember or maintenance consideration. Notes are used to identify applicable material which is intended to assist with compliance, but do not relieve the operator of the responsibility for compliance with all applicable requirements. Notes are not a part of the provisos.

14. Inoperative components of an inoperative system: Inoperative items which are components of a system which is inoperative are usually considered components directly associated with and having no other function than to support that system. (Warning/caution systems associated with the inoperative system must be operative unless relief is specifically authorized per the MMEL).

15. "(M)" symbol indicates a requirement for a specific maintenance procedure which must be accomplished prior to operation with the listed item inoperative. Normally these procedures are accomplished by maintenance personnel; however, other personnel may be qualified and authorized to perform certain functions. Procedures requiring specialized knowledge or skill, or requiring the use of tools or test equipment should be accomplished by maintenance personnel. The satisfactory accomplishment of all maintenance procedures, regardless of who performs them, is the responsibility of the operator. Appropriate procedures are required to be published as part of the operator's manual or MEL.

16. "(O)" symbol indicates a requirement for a specific operations procedure which must be accomplished in planning for and/or operating with the listed item inoperative. Normally these procedures are accomplished by the flight crew; however, other personnel may be qualified and authorized to perform certain functions. The satisfactory accomplishment of all procedures, regardless of who performs them, is the responsibility of the operator. Appropriate procedures are

BH-214B

Defi ni ti ons

required to be published as a part of the operator's manual or MEL.

NOTE: The (M) and (O) symbols are required in the operator's MEL unless otherwise authorized by the Administrator.

17. "Deactivated" and "Secured" means that the specified component must be put into an acceptable condition for safe flight. An acceptable method of securing or deactivating will be established by the operator.

18. "Visual Flight Rules" (VFR) is as defined in FAR Part 91. This precludes a pilot from filing an Instrument Flight Rules (IFR) flight plan.

19. "Visual Meteorological Conditions" (VMC) means the atmospheric environment is such that would allow a flight to proceed under the visual flight rules applicable to the flight. This does not preclude operating under Instrument Flight Rules.

20. "Visible Moisture" means an atmospheric environment containing water in any form that can be seen in natural or artificial light; for example, clouds, fog, rain, sleet, hail, or snow.

21. "Passenger Convenience Items" means those items related to passenger convenience, comfort or entertainment such as, but not limited to, galley equipment, movie equipment, ash trays, stereo equipment, overhead reading lamps, etc.

22. Repair Intervals: All users of an MEL approved under FAR 121, 125, 129 and 135 must effect repairs of inoperative systems or components, deferred in accordance with the MEL, at or prior to the repair times established by the following letter designators:

Category A. Items in this category shall be repaired within the time interval specified in the remarks column of the operator's approved MEL.

Category B. Items in this category shall be repaired within three (3) consecutive calendar days (72 hours), excluding the day the malfunction was recorded in the aircraft maintenance

FEDERAL AVIATION ADMINISTRATION

Page: VIII

MASTER MINIMUM EQUIPMENT LIST

Revision: 6

Date: 01/31/95

BH-214B

#### Definitions

record/logbook. For example, if it were recorded at 10 a.m. on January 26th, the three day interval would begin at midnight the 26th and end at midnight the 29th.

Category C. Items in this category shall be repaired within ten (10) consecutive calendar days (240 hours), excluding the day

Bh214br0.txt

the malfunction was recorded in the aircraft maintenance record/logbook. For example, if it were recorded at 10 a.m. on January 26th, the 10 day interval would begin at midnight the 26th and end at midnight February 5th.

Category D. Items in this category shall be repaired within one hundred and twenty (120) consecutive calendar days (2880 hours), excluding the day the malfunction was recorded in the aircraft maintenance log and/or record.

The letter designators are inserted adjacent to Column 2.

### 23. Electronic fault alerting system - General

New generation aircraft display system fault indications to the flight crew by use of computerized display systems. Each aircraft manufacturer has incorporated individual design philosophies in determining the data that would be represented. The following are customized definitions (specific to each manufacturer) to help determine the level of messages affecting the aircraft's dispatch status. When preparing the MEL document, operators are to select the proper Definition No. 23 for their aircraft, if appropriate.

#### a. BOEING (B-757/767, B-747-400, B-777)

Boeing airplanes equipped with Engine Indicating and Crew Alerting Systems (EICAS), provide different priority levels of system messages (WARNING, CAUTION, ADVISORY, STATUS and MAINTENANCE). Any messages that affects airplane dispatch status will be displayed at a STATUS message level or higher. The absence of an EICAS STATUS or higher level (WARNING, CAUTION, ADVISORY) indicates that the system/component is operating within its approved operating limits or tolerances.

System conditions that result only in a maintenance level message, i.e. no correlation with a higher level EICAS message,

FEDERAL AVIATION ADMINISTRATION  
MASTER MINIMUM EQUIPMENT LIST

Page: IX  
Revision: 6  
Date: 01/31/95

BH-214B

#### Definitions

do not affect dispatch and do not require action other than as addressed within an operators standard maintenance program.

#### b. DOUGLAS (MD-11)

Some Douglas aircraft are equipped with an alerting function which is a subsystem within the Electronic Instrument System (EIS). The alerting function provides various levels of system condition alerts (WARNING, CAUTION, ADVISORY, MAINTENANCE and STATUS).

Alerts that affect aircraft dispatch will include WARNING, CAUTION, STATUS or MAINTENANCE level. MAINTENANCE alerts are

displayed on the status page of the EIS display panel under the maintenance heading.

A MAINTENANCE alert on the EIS indicates the presence of a system fault which can be identified by the Central Fault Display System (CFDS) interrogation. The systems are designed to be fault tolerant, however, for any MAINTENANCE alert, the MEL must be verified for dispatch purposes.

c. AIRBUS (A-300-600, A-310, A-320/319/321, A-330, A-340

Airbus aircraft equipped with Electronic Centralized Aircraft Monitoring (ECAM) provide different levels of system condition messages (WARNING, CAUTION, STATUS, and ADVISORY). A-320/319/321, A-330, and A-340 also provide MAINTENANCE status messages.

Any message that affects airplane dispatchability will normally be at the WARNING, CAUTION or STATUS level. MAINTENANCE messages (A-320/319/321, A-330, and A-340 only) are also indicated on ECAM Status Page below the white Maintenance Label.

A MAINTENANCE status (Class II) message on ECAM indicates the presence of a system fault which can be identified by CFDS (A-320/319/321) or CMS (A-330/A-340) interrogation. The systems are designed to be fault tolerant, however for any MAINTENANCE status (Class II) message, the A-320/319/321 MEL must be verified for dispatch capability. For the A-330 and A-340, MAINTENANCE status messages do not affect dispatch.

d. FOKKER (FK-100)

FEDERAL AVIATION ADMINISTRATION  
MASTER MINIMUM EQUIPMENT LIST

Page: X  
Revision: 6  
Date: 01/31/95

BH-214B

#### Definitions

Fokker aircraft are equipped with Multi Function Display System (MFDS) which provides electronic message referring to the different priority levels of system information (WARNING (red), CAUTION (amber), AWARENESS (cyan) AND STATUS (white). Any messages that affects aircraft dispatch will be at the WARNING, CAUTION or AWARENESS level. In these cases the MEL must be verified for dispatch capability and maintenance may be required.

System conditions that only require maintenance are not presented on the flight deck. These maintenance indications/messages may be presented on the Maintenance & Test Panel (MAP) or the Centralized Fault Display Unit (CFDU) and by dedicated Built In Test Evaluation (BITE) of systems.

24. "Administrative control item" means an item listed by the operator in the MEL for tracking and informational purposes. It may be added to an operator's MEL by approval of the Principal Operations Inspector provided no relief is granted, or provided

Bh214br0.txt

conditions and limitations are contained in an approved document (i.e. Structural Repair Manual, airworthiness directive, etc.). If relief other than that granted by an approved document is sought for an administrative control item, a request must be submitted to the Administrator. If the request results in review and approval by the FOEB, the item becomes an MMEL item rather than an administrative control item.

25. "\*\*\*\*" symbol in Column 1 indicates an item which is not required by regulation but which may have been installed on some models of aircraft covered by this MMEL. This item may be included on the operator's MEL after the approving office has determined that the item has been installed on one or more of the operator's aircraft. The symbol, however, shall not be carried forward into the operator's MEL. It should be noted that neither this policy nor the use of this symbol provide authority to install or remove an item from an aircraft.

26. "Excess Items" means those items that have been installed that are redundant to the requirements of the FARs.

27. "Day of Discovery" is the calendar day an equipment/instrument malfunction was recorded in the aircraft

FEDERAL AVIATION ADMINISTRATION

Page: XI

MASTER MINIMUM EQUIPMENT LIST

Revision: 6

Date: 01/31/95

BH-214B

#### Definitions

maintenance log and or record. This day is excluded from the calendar days or flight days specified in the MMEL for the repair of an inoperative item of equipment. This provision is applicable to all MMEL items, i.e., categories "A, B, C, and D."

FEDERAL AVIATION ADMINISTRATION      Page: XII  
MASTER MINIMUM EQUIPMENT LIST      Revision: 2  
Date: 06/14/89

BH-214B

Preamble  
(Effective 6/14/89)

The following is applicable for authorized certificate holders operating under Federal Aviation Regulations (FAR) Parts 121, 125, 129, 135: The FAR require that all equipment installed on an aircraft in compliance with the Airworthiness Standards and the Operating Rules must be operative. However, the Rules also permit the publication of a Minimum Equipment List (MEL) where compliance with certain equipment requirements is not necessary in the interests of safety under all operating conditions. Experience has shown that with the various levels of redundancy designed into aircraft, operation of every system or installed component may not be necessary when the remaining operative equipment can provide an acceptable level of safety. A Master Minimum Equipment List (MMEL) is developed by the FAA, with participation by the aviation industry, to improve aircraft utilization and thereby provide more convenient and economic air transportation for the public. The FAA approved MMEL includes those items of equipment related to airworthiness and operating regulations and other items of equipment which the Administrator finds may be inoperative and yet maintain an acceptable level of safety by appropriate conditions and limitations; it does not contain obviously required items such as wings, flaps, and rudders. The MMEL is the basis for development of individual operator MELs which take into consideration the operator's particular aircraft equipment configuration and operational conditions. Operator MELs, for administrative control, may include items not contained in the MMEL; however, relief for administrative control items must be approved by the Administrator. An operator's MEL may differ in format from the MMEL, but cannot be less restrictive than the MMEL. The individual operator's MEL, when approved and authorized, permits operation of the aircraft with inoperative equipment.

Equipment not required by the operation being conducted and equipment in excess of FAR requirements are included in the MEL with appropriate conditions and limitations. The MEL must not deviate from the Aircraft Flight Manual Limitations, Emergency Procedures or with Airworthiness Directives. It is important to remember that all equipment related to the airworthiness and the operating regulations of the aircraft not listed on the MMEL must be operative.

FEDERAL AVIATION ADMINISTRATION      Page: XIII  
MASTER MINIMUM EQUIPMENT LIST      Revision: 2  
Date: 06/14/89

BH-214B

Preamble  
(Effective 6/14/89)

Suitable conditions and limitations in the form of placards, maintenance procedures, crew operating procedures and other restrictions as necessary are specified in the MEL to ensure that an acceptable level of safety is maintained.

The MEL is intended to permit operation with inoperative items of equipment for a period of time until repairs can be accomplished. It is important that repairs be accomplished at the earliest opportunity. In order to maintain an acceptable level of safety and reliability the MMEL establishes limitations on the duration of and conditions for operation with inoperative equipment. The MEL provides for release of the aircraft for flight with inoperative equipment. When an item of equipment is discovered to be inoperative, it is reported by making an entry in the Aircraft Maintenance Record/Logbook as prescribed by FAR. The item is then either repaired or may be deferred per the MEL or other approved means acceptable to the Administrator prior to further operation. MEL conditions and limitations, do not relieve the operator from determining that the aircraft is in condition for safe operation with items of equipment inoperative.

When these requirements are met, an Airworthiness Release, Aircraft Maintenance Record/Logbook entry, or other approved documentation is issued as prescribed by FAR. Such documentation is required prior to operation with any item of equipment inoperative.

Operators are responsible for exercising the necessary operational control to ensure that an acceptable level of safety is maintained. When operating with multiple inoperative items, the interrelationships between those items and the effect on aircraft operation and crew workload will be considered.

Operators are to establish a controlled and sound repair program including the parts, personnel, facilities, procedures, and schedules to ensure timely repair.

WHEN USING THE MEL, COMPLIANCE WITH THE STATED INTENT OF THE PREAMBLE, DEFINITIONS, AND THE CONDITIONS AND LIMITATIONS SPECIFIED IN THE MEL IS REQUIRED.

BH-214B

Guidelines for (O) & (M) Procedures

The FOEB has identified a need for certain procedures to provide an adequate level of safety while providing relief for some items. Those procedures must be established by the operator. The following guidelines specify the objectives of the required procedures:

- 65-1 (M) Procedure to inspect rotor brake assembly to ensure rotor brake disk rotates freely and no hydraulic leaks exist.
- 65-2 (M) Procedure to deactivate electrical power from the rotor brake warning light system.

U. S. DEPARTMENT OF TRANSPORTATION

FEDERAL AVIATION ADMINISTRATION

MASTER MINIMUM EQUIPMENT LIST

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

21-1

SYSTEM & SEQUENCE NUMBERS		1. ITEM	2. NUMBER INSTALLED		3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS
21 AIR CONDITIONING						
1.	Cockpit Vent Blowers	C	2	0		May be inoperative provided: a) Heated Windshields are installed and operative. OR b) Heater/Defog Control Valve is operative.
2.	Heater/Defog Control Valve	C	1	0		May be inoperative provided: a) Outside air temperature is above +5 degrees C (+41 degrees F), and b) Cockpit Vent Blowers are operative. OR a) Heated Windshields are installed and operative.

U. S. DEPARTMENT OF TRANSPORTATION

FEDERAL AVIATION ADMINISTRATION

MASTER MINIMUM EQUIPMENT LIST

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

22-1

1. | 2. NUMBER INSTALLED

SYSTEM & SEQUENCE NUMBERS	ITEM			3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS
22	AUTO FLIGHT				
1.	Automatic Flight Control System				
a)	Attitude Heading Hold (AFCS)	C	1	0	
b)	Stability Control Augmentation System (SCAS)	C	1	0	External load operations with roll SCAS channel inoperative are prohibited.

U. S. DEPARTMENT OF TRANSPORTATION

FEDERAL AVIATION ADMINISTRATION

MASTER MINIMUM EQUIPMENT LIST

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

23-1

SYSTEM & SEQUENCE	ITEM	1.	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH
-------------------	------	----	---------------------	---------------------------------

NUMBERS				4. REMARKS OR EXCEPTIONS
23	COMMUNICATIONS			
1.	Communications System (FM, HF, UHF, VHF, etc.)	C	- 0	As required by FAR.
2.	Cockpit Voice Recorder (CVR) System (If no FDR required by FAR)	A	1 0	May be inoperative provided repairs are made within three flight days.
	Cockpit Voice Recorder (CVR) (If FDR required by FAR)	A	1 0	May be inoperative provided: a) Flight Date Recorder is operating normally, and b) Repairs are made within three flight days.
3.	Cabin Public Address System	C	- 0	
4.	Passenger Briefing Tape	C	- 0	
5.	Passenger Compartment ICS Control Panels	C	- 0	(0) May be inoperative provided: a) Alternate normal and emergency procedures and/or operating restrictions are established and utilized, and, b) Cabin attendant is not carried. OR c) For nonpassenger carrying operations.

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

24-1

SYSTEM & SEQUENCE NUMBERS	1. ITEM	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS

24 ELECTRICAL POWER

1. Inverters	B	2	1	One may be inoperative for day VFR.
--------------	---	---	---	-------------------------------------

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

25-1

SYSTEM & SEQUENCE NUMBERS	1. ITEM	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS
25	EQUIPMENT/FURNISHINGS			

1.	Helicopter Flotation Devices	C	-	0	As required by FAR.
2.	Passenger Seat Belts	C	-	0	One for each occupied seat. If belt is inoperative or missing, seat must be blocked & placarded.
3.	Crewmember Shoulder Harness	B	-	0	If a harness becomes inoperative, aircraft shall not depart airport where repairs or replacements can be made.
4.	Cargo Suspension System	C	-	0	
5.	Hoist System	C	-	0	
6.	ELT	C	-	0	
7.	Passenger Convenience Item(s)		-	0	Passenger convenience items, as expressed in this MMEL are those related to passenger convenience, comfort or entertainment such as, but not limited to, galley equipment, movie equipment, ash trays, stereo equipment, overhead reading lamps, etc. Items addressed elsewhere in this document shall not be included. (M) and (O) procedures may be required and included in the air carrier's appropriate document.

U. S. DEPARTMENT OF TRANSPORTATION

FEDERAL AVIATION ADMINISTRATION

MASTER MINIMUM EQUIPMENT LIST

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

26-1

SYSTEM & SEQUENCE NUMBERS	1. ITEM	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS	
26	FIRE PROTECTION				
1.	Baggage	C	2	0	May be inoperative provided

Compartment Smoke  
Detector Systems

Bh214br0.txt  
compartment is empty.

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

27-1

SYSTEM & SEQUENCE NUMBERS	ITEM	1.		2. NUMBER INSTALLED		3. NUMBER REQUIRED FOR DISPATCH		4. REMARKS OR EXCEPTIONS
27	FLIGHT CONTROLS							
1.	Force Trim	C	1	0				

U. S. DEPARTMENT OF TRANSPORTATION

FEDERAL AVIATION ADMINISTRATION

MASTER MINIMUM EQUIPMENT LIST

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

30-1

SYSTEM & SEQUENCE NUMBERS	1. ITEM	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS
30	ICE AND RAIN PROTECTION			
1.	Pitot Tube Heaters B	3	0	May be inoperative provided: a) For VFR, b) Ambient temperatures are above +4.5 degrees C (+40 degrees F), and

Bh214br0.txt

2.	Windshield Wipers	C	2	0	<p>c) Operations are not conducted in precipitation.</p> <p>May be inoperative provided:</p> <p>a) For VFR, and</p> <p>b) Operations are not conducted in precipitation during takeoff or landing phases.</p>
3.	Engine Inlet Anti-Icing Systems	C	2	0	<p>May be inoperative provided known and forecast conditions for flight are:</p> <p>a) Above +4.5 degrees C (+40 degrees F) ambient temperature, and</p> <p>b) No visible moisture.</p>
4.	Heated Windshields	C	-	0	<p>May be inoperative provided:</p> <p>a) Heater/Defog System is operative.</p> <p style="text-align: center;">OR</p> <p>b) Both Cockpit Vent Blowers are operative.</p>

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

31-1

SYSTEM & SEQUENCE NUMBERS	ITEM	1.	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS
31	INDICATING/RECORDING SYSTEMS				
1.	Clock Displaying Hours, Minutes, and Seconds with Sweep-Second Pointer or Digital Presentation	C	-	1	Operative clock must be located on the instrument panel in a position that makes it plainly visible to, and usable by, any pilot at the pilot's station. is operative.

Bh214br0.txt

2.	Hour Meter	C	-	0	
3.	Aircraft/Engine Monitoring System	C	-	0	
4.	Flight Data Recorder	B	-	0	May be inoperative provided: a) Cockpit Voice Recorder operates normally, and b) Repairs are made within three flight days.

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

33-1

SYSTEM & SEQUENCE NUMBERS	ITEM	1.	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS
33 LIGHTS					
1.	Position Light System	C	1	0	May be inoperative for day operations.
2.	Anti-Collision Light System	B	1	0	May be inoperative for day operations.
3.	Landing Light	C	1	0	May be inoperative provided: a) Search Light is operative. OR

4.	Search Light	C	1	0	b) For day operations.
5.	Cockpit Instrument Lighting System	B	-	0	May be inoperative provided: a) Sufficient lighting is operative to make each required instrument, control, and other device for which it is provided easily readable, b) Direct rays and reflections do not impair visibility either inside or outside aircraft, c) Lighting intensity can be controlled or preset to a satisfactory level for expected flight conditions, and d) Lighting configuration at dispatch is acceptable to flight crew. OR e) For day operations.
6.	Cabin Emergency Lights	C	-	0	May be inoperative provided passenger are not carried.
7.	Passenger Notice	B	1	0	(0)May be inoperative provided:

U. S. DEPARTMENT OF TRANSPORTATION

FEDERAL AVIATION ADMINISTRATION

MASTER MINIMUM EQUIPMENT LIST

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

33-2

SYSTEM & SEQUENCE NUMBERS	1. ITEM	2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS	
33	LIGHTS				
	System (Fasten Seat Belt-No Smoking)			a) Passengers are not carried. OR b) Alternate procedures are used for passenger notification. OR c) Public address system is installed and operative.	
8.	Strobe Light System	C	-	0	
9.	Cabin Lighting	C	-	0	May be inoperative provided:

Bh214br0.txt

System					
10. Supplemental Lighting Systems	C	-	0		a) For day operations. OR b) Inoperative lights do not exceed fifty (50) percent of the total installed.

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

34-1

SYSTEM & SEQUENCE NUMBERS	ITEM	1.	2. NUMBER INSTALLED		4. REMARKS OR EXCEPTIONS
			3.	NUMBER REQUIRED FOR DISPATCH	
34	NAVIGATION				
1.	Gyroscopic Rate-of-Turn Indicator	B	-	0	May be inoperative provided Standby Attitude Indicator is installed and operative.
2.	OAT/Free Air Temperature Indicator	C	1	0	May be inoperative provided approved alternate onboard OAT source is installed and operative.
3.	Standby Attitude Indicator	B	-	0	May be inoperative for VFR provided respective Gyroscopic Rate-of-Turn Indicator is installed and operative.
4.	Navigation Systems	C	-	0	As required by FAR.

(VOR, ILS, ADF, Long Range, etc.)				
5. ATC Transponder	C	-	0	As required by FAR.
6. Weather Radar	C	-	0	As required by FAR.
7. Radio Altimeter	C	-	0	As required by FAR.
8. Flight Director	C	1	0	
9. Altitude Encoding System	C	-	0	
10. Marker Beacon	C	-	0	May be inoperative provided approach is not predicated on its use.
11. DME	C	-	0	May be inoperative provided navigation is not predicated on its use.

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

35-1

SYSTEM & SEQUENCE NUMBERS	1. ITEM		2. NUMBER INSTALLED	3. NUMBER REQUIRED FOR DISPATCH	4. REMARKS OR EXCEPTIONS
35	OXYGEN				
1.	Oxygen System and Masks (Crew and Passengers)	C	-	0	As required by FAR.

U. S. DEPARTMENT OF TRANSPORTATION

FEDERAL AVIATION ADMINISTRATION

MASTER MINIMUM EQUIPMENT LIST

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

52-1

SYSTEM & SEQUENCE NUMBERS	ITEM	1.	2. NUMBER INSTALLED		4. REMARKS OR EXCEPTIONS
			3. NUMBER REQUIRED FOR DISPATCH		
52	DOORS				
1.	Passenger/Cargo Door Warning System	C	1	0	May be inoperative provided it is verified by visual check that doors are closed and latched.

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

65-1

SYSTEM & SEQUENCE NUMBERS	ITEM	1.	2. NUMBER INSTALLED		4. REMARKS OR EXCEPTIONS
			3.	NUMBER REQUIRED FOR DISPATCH	
65	ROTOR				
1.	Rotor Brake System	C	1	0	(M)May be inoperative provided: a) Inspection verifies that rotor disc is free, and b) System is deactivated and secured.
2.	Rotor Brake Warning Light	C	1	0	(M)May be inoperative provided: a) Inspection verifies that rotor disc is free, and b) Rotor brake system is deactivated and secured.
3.	Inflight Tracking System	C	-	0	
4.	Transmission Oil Temperature Warning Light System	C	1	0	
5.	Transmission Oil	C	1	0	

	Pressure Warning Light System			
6.	Speed Decreaser Gear Box Temperature Warning Light System	C	1	0
7.	Speed Decreaser Gear Box Pressure Warning Light System	C	1	0

U. S. DEPARTMENT OF TRANSPORTATION

MASTER MINIMUM EQUIPMENT LIST

FEDERAL AVIATION ADMINISTRATION

AIRCRAFT:

BH-214B

REVISION NO: ORIGINAL

PAGE:

DATE: 03/01/95

77-1

SYSTEM & SEQUENCE NUMBERS	ITEM	1.	2. NUMBER INSTALLED		4. REMARKS OR EXCEPTIONS
			3.	NUMBER REQUIRED FOR DISPATCH	
77 ENGINE INDICATING					
1.	Dual Tachometer Indicator	C	2	1	One may be inoperative provided operative indicator is at the station of pilot manipulating flight controls.
2.	Torque Indicator		2	1	One may be inoperative provided operative indicator is at the station of pilot manipulating flight controls.
3.	Fuel Flow Indicator System	B	-	0	

Bh214br0. txt